


Fig 1

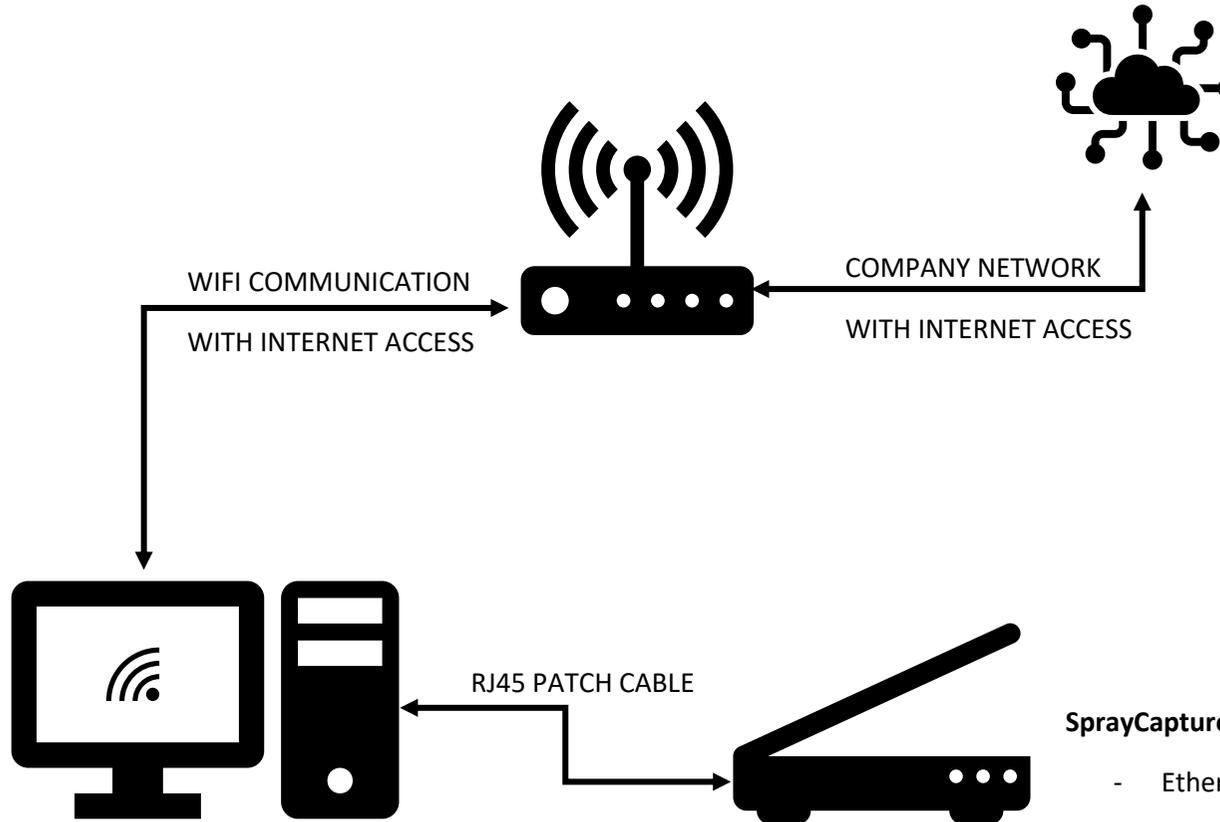

Dedicated PC

- 1x Wi-Fi connection
- 1x Ethernet connection RJ45

Wi-Fi network configuration set to your local network, must have access to the internet

Example of ethernet connection IPv4 settings:
IP ADDRESS: 192.168.1.20
SUBNET MASK: 255.255.255.0
GATEWAY: 192.168.1.1

Can be changed to the company network policies

SprayCapture unit


- Ethernet connection RJ45

Example of ethernet connection IPv4 settings:
IP ADDRESS: 192.168.1.50
SUBNET MASK: 255.255.255.0
GATEWAY: 192.168.1.1

Can be changed to the company network policies

The SprayCapture unit and the PC must be in the same network to communicate with each other. The settings of IPv4 can be changed, but both devices need to be in same network! The SprayCapture unit must have static IP address, because the SSL certificate is made only for one IP address.

Fig 2

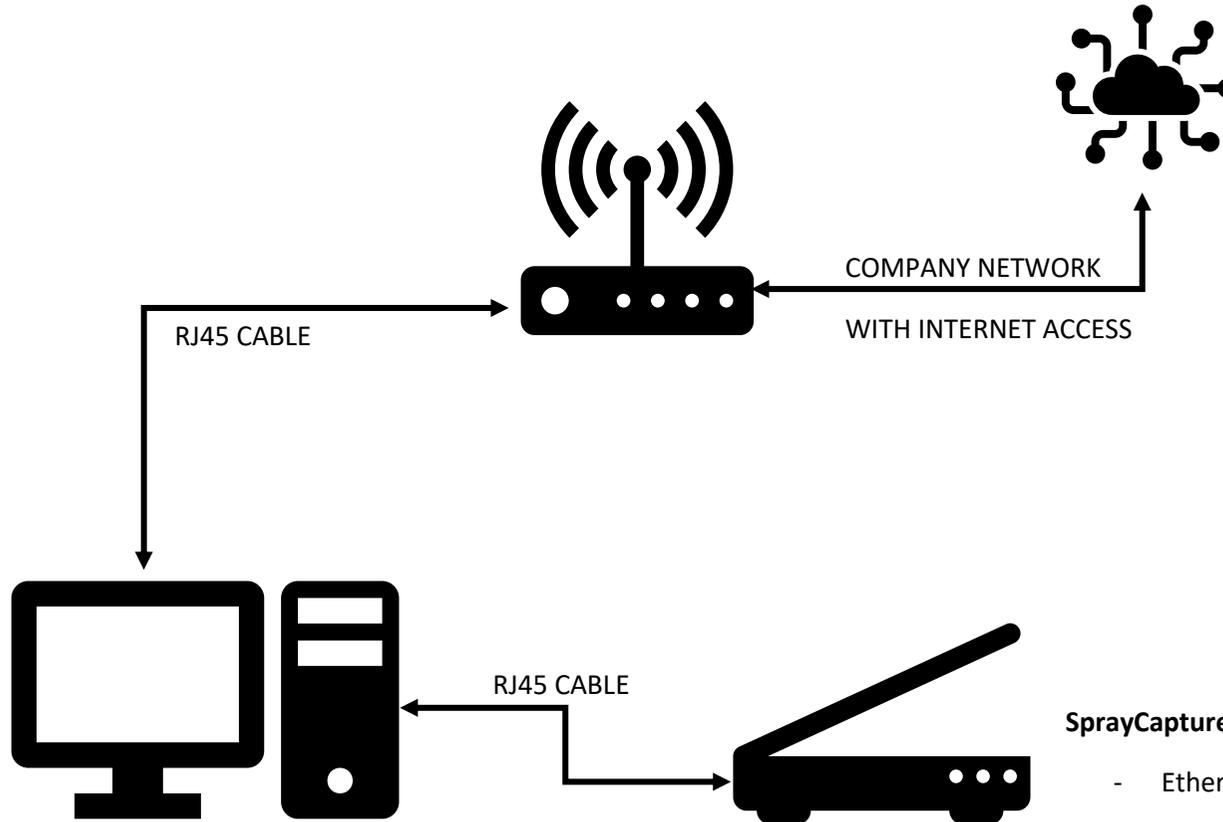

Dedicated PC

2x Ethernet connection RJ45

One network configuration for the company network for communication, must have internet access.

Example of ethernet connection IPv4 settings:

IP ADDRESS: 192.168.1.20

SUBNET MASK: 255.255.255.0

GATEWAY: 192.168.1.1

Can be changed to the company network policies

SprayCapture unit

- Ethernet connection RJ45

Example of ethernet connection IPv4 settings:

IP ADDRESS: 192.168.1.50


SUBNET MASK: 255.255.255.0

GATEWAY: 192.168.1.1

Can be changed to the company network policies

The SprayCapture unit and the PC must be in the same network to communicate with each other. The settings of IPv4 can be changed, but both devices need to be in same network! The SprayCapture unit must have static IP address, because the SSL certificate is made only for one IP address.

Fig 3

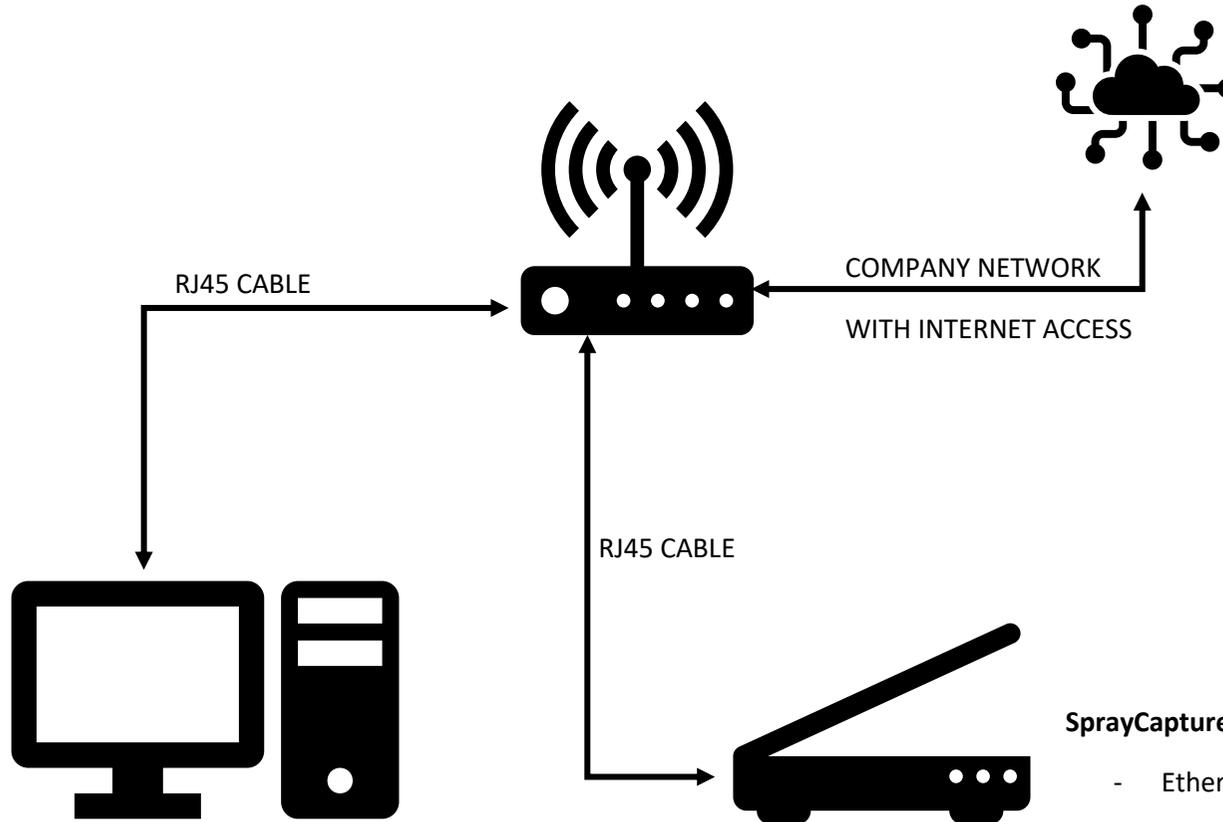

Dedicated PC

1x Ethernet connection RJ45

One network configuration for the company network for communication, must have internet access.

Example of ethernet connection IPv4 settings:

IP ADDRESS: 192.168.1.20

SUBNET MASK: 255.255.255.0

GATEWAY: 192.168.1.1

Can be changed to the company network policies

SprayCapture unit

- Ethernet connection RJ45

Example of ethernet connection IPv4 settings:

IP ADDRESS: 192.168.1.50

SUBNET MASK: 255.255.255.0

GATEWAY: 192.168.1.1

Can be changed to the company network policies

The SprayCapture unit and the PC must be in the same network to communicate with each other. The settings of IPv4 can be changed, but both devices need to be in same network! The SprayCapture unit must have static IP address, because the SSL certificate is made only for one IP address.